



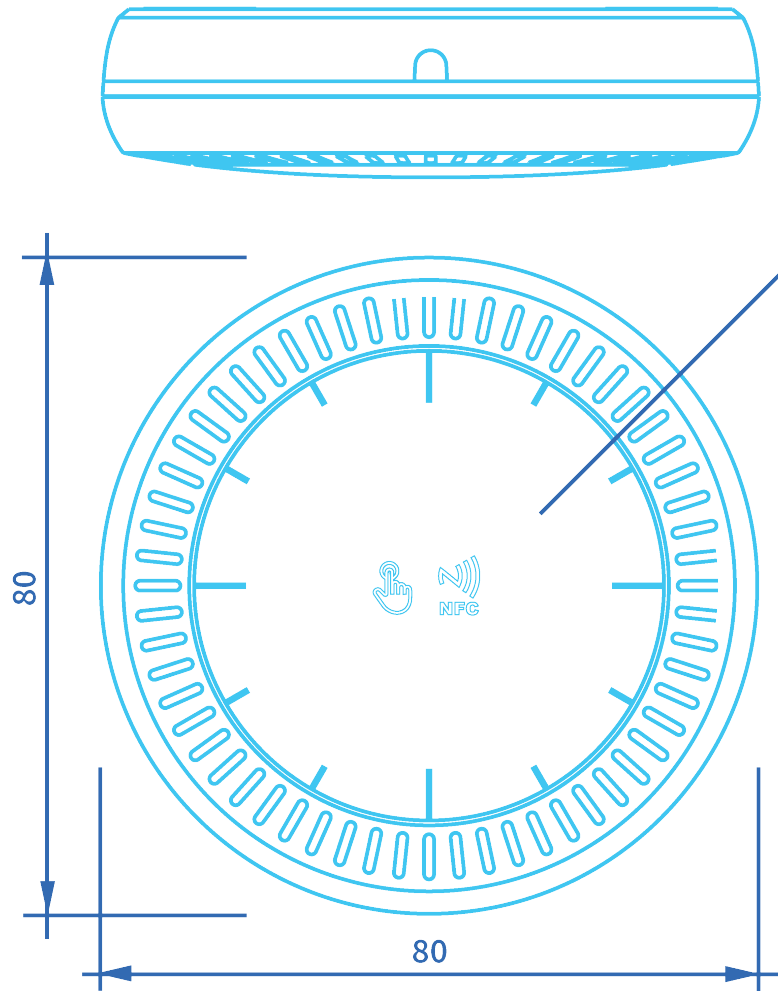

MAIN button

Munting plate
Cable holder/cover

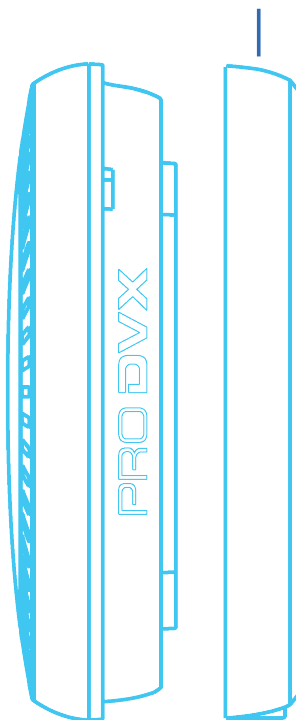

Reset button
USB port
typeC

