

APPC-10SLB(W)



User Manual

Content


Declaration	2
Product Instruction	
Power on the Product	5
Without Mounting Bracket	5
Use Mounting Bracket	5
Insert SD Card	6
Insert USB Devices	6
Display different content for double	8
Home Screen	11
System Bar	14
Applications	17
Language	
Date & Time	
Volume	
Brightness	21
Scheduled	
Wi-Fi	
Ethernet	
Bluetooth	27
Virtual Keyboard	
Switch Input Methods	
Surf Online	
Browse Files	
Play Media	
Install & Uninstall Apps	
Install Apps	
Uninstall Apps	
Reset to Factory Default	
Federal Communications Commission (FCC) Statement	42




Declaration

- Please read the instructions carefully before equipment installation and using the device.
- ✓ Do not put the product in high temperature, humid or dusty environment.
- ✓ Do not drop, crash or break down this product.
- This product is without battery, and after setting up any Settings on the Settings, it is recommended that the user should not immediately shutdown and confirm. Please wait for at least 5s before shutting down. For the system to save Settings data to database.
- Do not power off the device when it's formatting or upgrading, otherwise it will cause operation system error.
- This product is not waterproof.
- ✓ Use only approved add-on enhancements.



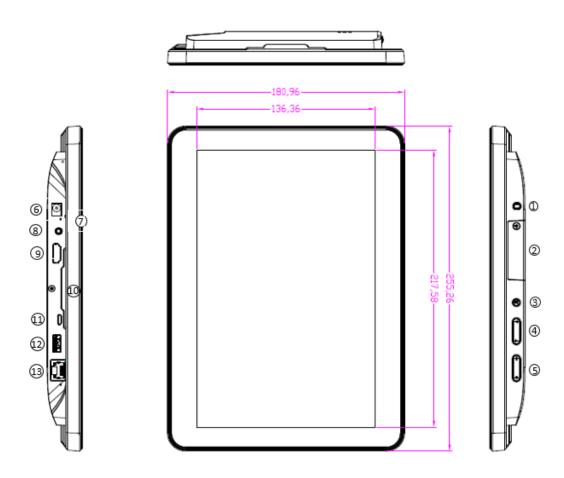



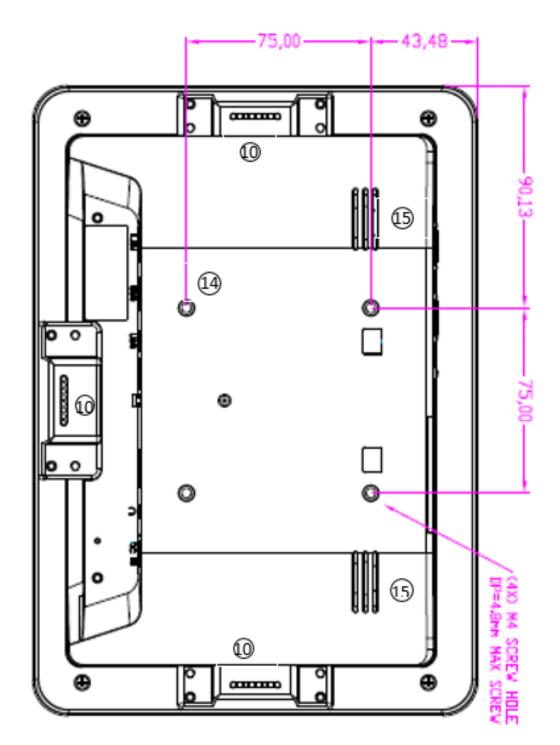

- **1. Power Key:** (1). Short press sleep and wake up
- (2).Long press to pop out the power off and reboot dialog box
- 2. SD Card Slot / Cover: support external SD card
- 3. Exit Button: return to the previous page
- 4. Function Keys (Up / Down): select the up/down item
- 5. Function Keys (Vol+ / Vol-): adjust the system volume



6. DC In Jack: powered by 12V/2A DC input

7. LED Indicator:

Green	Power supply is on.
Red	sleep state.

8. Headphone: 3.5mm Stereo + MIC

9. HDMI Port: HDMI Type A output (covered, for production test only)

10. Add-on module slot: to put optional add-on module

11. Micro-USB Port: support Micro-USB 2.0

- **12. USB Port:** support USB 2.0 Host type A
- 13. 10/100/1000Mbps RJ45 Ethernet Port: support Ethernet connection
- 14. VESA Mount Holes: for installing the bracket
- 15. Speakers: 80hm / 2W
- 16. WIFI: 802.11b/g/n/ac 2.4G/5G
- **17. Temperature:** Operation: 0°C ~ 40°C (32F ~104F)

Storage: -10°C ~ 55°C (14°F ~ 131°F)

18: Bluetooth : V4.2 of 1, 2 and 3 Mbps.

Power on the Product

Without Mounting Bracket

Step1 Power on the power adapter that connected to this product.

Step2 When the power is switched on, the LED light (#7) shows green.

Use Mounting Bracket

Step1 Put the mounting bracket to the back of the tablet, and tighten the installation screws on the screw holes.

Step2 Plug the power adapter into the DC in jack (#8 in <u>Product Instruction</u>) at the bottom of the mounting bracket.



Insert SD Card

This product supports external SD card. Please insert your SD card into the SD Card Slot (**#2** in <u>Product Instruction</u>) on the top of this product.

Insert USB Devices


This product supports USB and Micro-USB to deal with your files.

USB

Plug your USB memory into the USB port (**#12** in <u>Product Instruction</u>) on the bottom of this product, and then you can do the file operations via the File Browser. (See in <u>Browse Files</u>).

Micro-USB

Connect the Micro-USB port (**#11** in <u>Product Instruction</u>) on the bottom of this product and the USB port on your computer with a Micro-USB-to-USB cable.

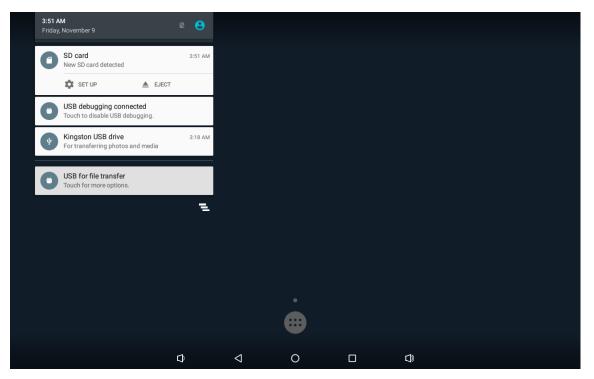



Click the "USB debugging connected" Entry "Developer options" interface;

		4:27
Developer options		
Take bug report		
Desktop backup password Desktop full backups aren't currently protected		
Stay awake Screen will never sleep while charging		
HDCP checking Use HDCP checking for DRM content only		
Enable Bluetooth HCI snoop log Capture all bluetooth HCI packets in a file		
Running services View and control currently running services		
Debugging		
USB debugging Debug mode when USB is connected		
Revoke USB debugging authorizations		
	Take bug report Desktop backup password Desktop full backups aren't currently protected Stay awake Screen will never sleep while charging HDCP checking Use HDCP checking for DRM content only Enable Bluetooth HCI snoop log Capture all bluetooth HCI packets in a file View and control currently running services Debugging USB debugging Debugging Debugg mode when USB is connected Revoke USB debugging authorizations	Take bug report Desktop backup password Desktop full backups arent currently protected Stay awake Screen will never sleep while charging DDCP checking Use HDCP checking for DRM content only Enable Bluetooth HCI snoop log Capture all bluetooth HCI packets in a file Running services View and control currently running services Debugging Debugg mode when USB is connected Revoke USB debugging authorizations

Click the "USB for file transfer" access to the USB use options interface.





Display different content for double


This product supports display different content for double screen. Please plug one side of the HDMI cable into the HDMI port (**#9** in <u>Product Instruction</u>) on the bottom of this product, and plug the other side of the HDMI cable into the HDMI port of the monitor.

Display screen and this product display different interface. Dual screen show different content Guide:

1. Enter settings to display outputs;

a a		📓 3:17
	Settings	م
	Ethernet Data usage	
	More	
	Device	
	Display Sound & notification	
	🍯 Apps 🔚 Storage & USB	
	E Memory L Users	
	N [®] Display Output Screenshot Setting	
	Personal	
	Cocation 🔓 Security	
	🖪 Accounts 🌐 Language & input	

2. Select "Display different content for double screen";

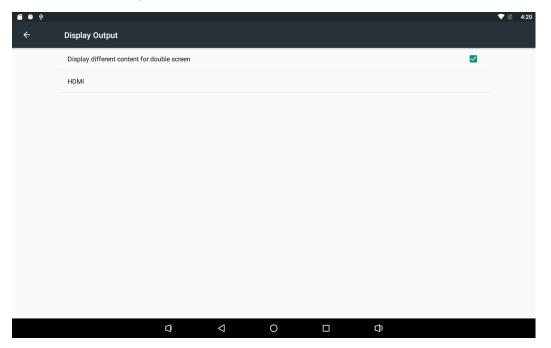



3. Open at least two running programs .For example, video and browser;


4. Slide your finger from the right side to left on the touch panel, then you will see two buttons;




- E This button is different display button.
- : This button is same display button



5. Click the button, the video display will only stay on HDMI monitor, and the APPC-10SLB(W) will display previous apk screen;

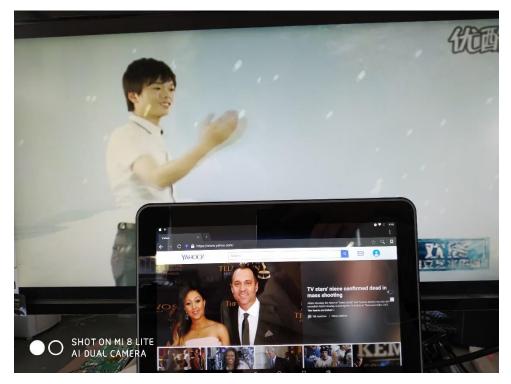


6. If you want close the different display, please repeat step 4 and then click button, the APPC-10SLB(W) and HDMI monitor will display same screen.

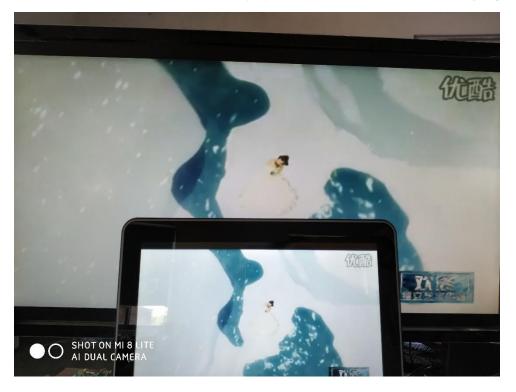




Home Screen

In the home screen, you can long-press the blank space to change the wallpaper or drag widgets to desktop.

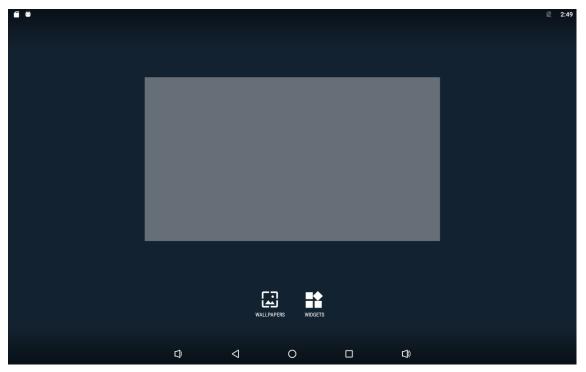


Change Wallpaper:

- 1. Click "WALLPAPERS".
- 2. Select one picture from system presets or your own pictures.

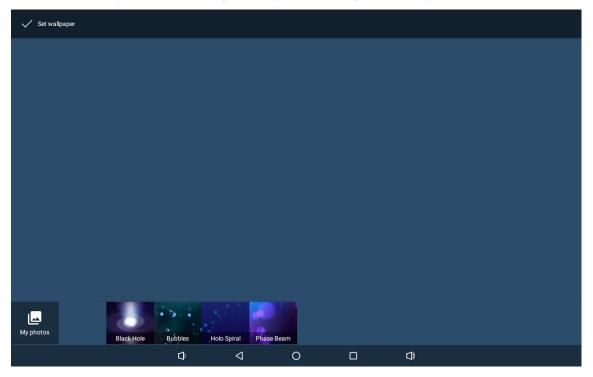



3. Click "Set wallpaper" on the middle corner of the screen to apply the wallpaper.

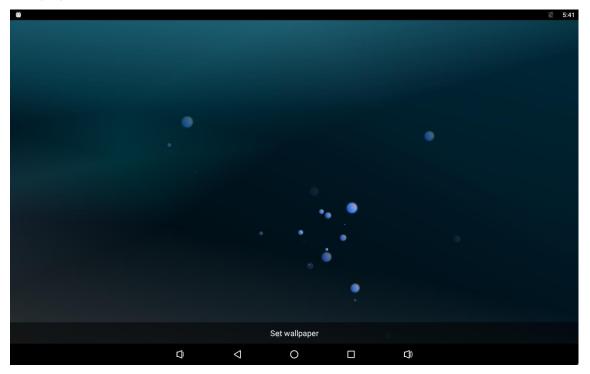

Add Widgets:

1. Click "WIDGETS".

6						Z	2:51
۲	Browser						
	Bookmark 1 × 1	Bookmarks 2 × 2					
	Calendar						
	Calendar 2 × 2 re Sep 27 Mata Cooker 1, Mate Locean Zan - Jan Mata Cooker 1, Mate Locean Anton 1, Mata Cooker 1						
	Clock						
	Analog clock 2 × 2						
		(۲	4	0	C))		



2. Long-press a widget and drag it to desktop.



3. If you want to remove an icon, long-press the widget and drag it onto "×Remove" at the top of the screen and drop it until it turns light gray.





System Bar Navigation Buttons

|--|--|

- **1. Volume-:** Decrease the system volume.
- 2. Back: Return to the previous page.
- **3. Home:** Return to the home screen.
- 4. Recents: Switch between recently used apps.

a b				2	3:10
	Apkinstaller		×		
			^		
	🚰 R.E.		×		
		SD			
	10.75MB	n 1990 - Saltan Albana, ang Saltan			
	Android 18-11-08 14-45:00				
	Settings		×		
		Ethernet	0	D	
		More			
	Devi	ice			
	0	Display		S-	
	•	Apps	=	S	
	5 Explorer		>		
		Ex			
	D)		0, 1 0		



To delete an application from the list, you can delete the application by clicking on the "X" icon in the upper right corner or Left and right removal.

— •		🕱 3:10
	Apkinstaller ×	
	🚰 R.E. 🛛 🗙	
	10.75MB	
	Android 18-11-00 14-500	
	× t 06.4100	
	1R 10.17.00	
Ethernet	O D	
More		
ice		
Display	🌲 S	
Apps	s	
Memory	Explorer >	
Display Output		
ional	=×	
Location		

Click on the middle of the three to delete the X Icon.

· 👛 单			🛛 🖉 3:16
	ApkInstaller	×	
	80 R.E.	×	
	о 75мв П		
	Android 18-11-08 16:45:00		
	Settings	×	
	Ethernet	O D	
	More		
	Device		
	Display	🌲 S	
	Apps	s s	
() () () () () () () () () ()	Explorer	×	
		0.10°	

5. Volume+: Increase the system volume.




Status Notifications

Ő

Status bar at top of the screen displays system status, such as time, Wi-Fi, and USB connection etc.

Pull down the upper left corner or the upper right corner to open the state window and shortcut windows, including brightness adjustment, Wi-Fi, automatic rotation, Bluetooth, projection, aircraft mode and position switch, and system settings entry

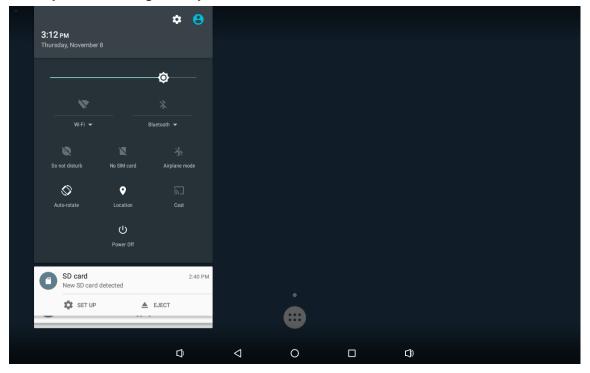



* 💎 🕅 🛛 3:56

Applications

Click at the bottom of home screen to enter the applications page. Q 0 • Contacts Email Explore Calenda Camera Clock Downloads Galler R 0 R.E.管理器 Searc Ø \triangleleft 0

The installed applications will be shown here and you can open an app by clicking its icon.

To find an app easily, you can create a shortcut by long-pressing of the icon and drag it to the home screen.





Language

In the App list, click "**Settings**" to open the system setting app, and select the option "**Language & input**".

a a							🛛 3:18
s	ettings						۹
		Аррз			-	Storage & OSD	
		Memory			÷	Users	
	ល	Display Output			•	Screenshot Setting	
	Persor	al					
	•	Location			â	Security	
	8	Accounts				Language & input	
	0	Backup & reset					
	Systen	1					
	©	Date & time			Ċ	Scheduled	
	P	Physical Button Manager			Ť	Accessibility	
	ē	Printing			i	About tablet	
		D	\triangleleft	0			

Click the first option "Language" under "Language & input", and then you can change the system language according to your preference.

						3:19
÷	Language					
	Afrikaans					
	Azərbaycan					
	Bahasa Indonesia					
	Bahasa Melayu					
	Català					
	Čeština					
	Dansk					
	Deutsch (Deutschland)					
	Deutsch (Liechtenstein)					
	Deutsch (Österreich)					
		D	\triangleleft	0		



Date & Time

In the App list, click "**Settings**" to open the system setting app, and select the option "**Date & time**".

ö			🖹 3:19
	Settings		۹
	νψμ5 		
	Memory	Lusers	
	Display Output	Screenshot Setting	
	Personal		
	Location	Security	
	Accounts	Language & input	
	Backup & reset		
	System		
	🔇 Date & time	ڻ Scheduled	
	Physical Button Manager	Accessibility	
	🖶 Printing	() About tablet	
	D V	O 🗆 Ø	

If you enabled the option "Automatic date & time" under "Date & time", system date and time will be synchronized automatically with network time when you connected a Wi-Fi network.

If you want to set the time manually, you need to disable "Automatic date & time" and "Automatic time zone".



Date & time	
Automatic date & time Use network-provided time	۰
Automatic time zone Use network-provided time zone	•
NTP Server 2.android.pool.ntp.org	
Set date November 8, 2018	
Set time 3:19 PM	
Select time zone GMT+01:00 Central European Standard Time	
Use 24-hour format 1:00 PM	•

In this option, you can also set time zone, time notation and date format.

Volume


On the system bar, click the **Volume-** icon to decrease the system volume, and click the **Volume+** icon to increase the system volume.

Or you can press the function keys (#5 in <u>Product Instruction</u>) on the top of the product to adjust the volume.




Brightness

Pull down the screen and open the shortcut window, then click "brightness".

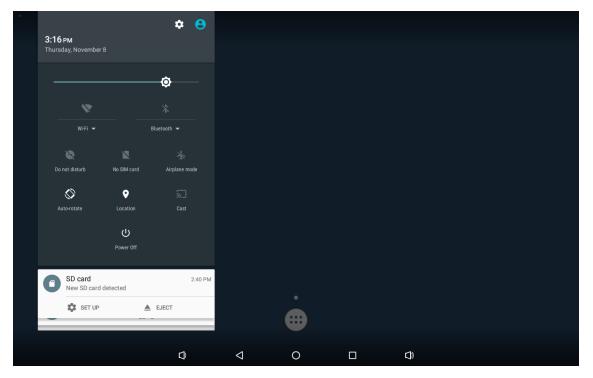

 Left and right sliding brightness bar to adjust brightness.






Scheduled

This function is used to power the device on and off automatically at the set time.

In the App list, click "**Settings**" to open the system setting app, and select the option "**Scheduled**".

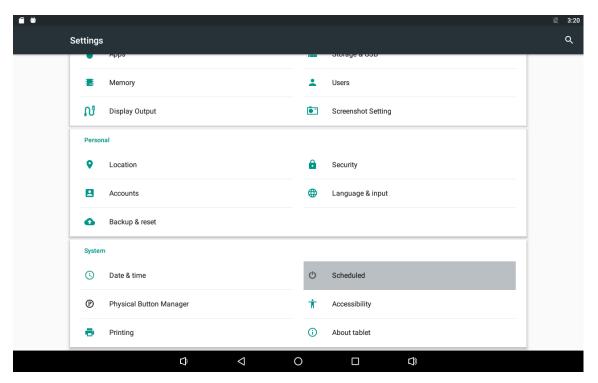


Click the single option "Set Scheduled Shutdown Clocks".


.						ľ.	3:20
	Set Shutdown Clock					REVERT	DONE
Time 00:00							
Repeat Never							
		¢	\bigtriangledown	0	J)		

Click the option "Time" to set the power off time of this device.



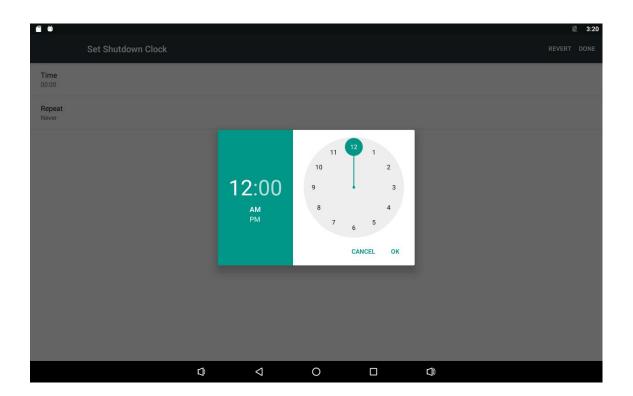

Click the option "**Repeat**" to select the days which will power off this device at the set time.

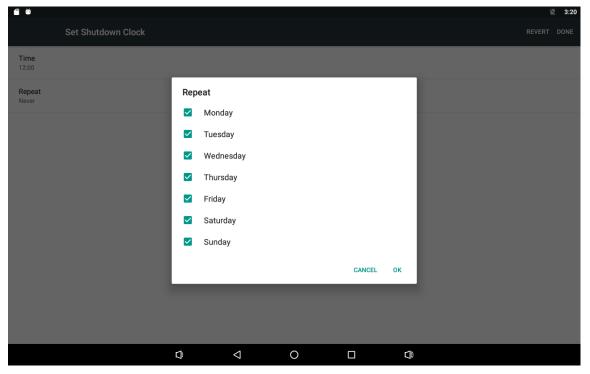

After setting, click "Done" at the upper-right corner of the screen to save them.



≝ ĕ ←	Scheduled					2:21
	Shut 12:00 Down Everyday					
	Re boot 00:00					
	Sleep ON 00:00					
	Sleep OFF 00:00					
		¢	\bigtriangledown	0	L)	

Follow the above steps to set the "Reboot", "Sleep ON" and "Sleep OFF" times.

i iii							23:
÷	Scheduled						
	Shut Down	12:00 Everyday					
	Re boot	14:00 Everyday					
	Sleep ON B	14:15 Everyday					
	Sleep OFF	14:30 Everyday					
			-			_	
			\Box	\Diamond	0		

The above operation will be performed at a specified time; (Sleep off time is greater than Sleep on time)



Wi-Fi

In the App list, click "**Settings**" to open the system setting app, and select the option "**Wi-Fi**".


e •								☑ 3:22
÷	Wi-Fi							:
	On						•	
	₹.	China-Wifi						
			Ø	\bigtriangledown	0			

Switch the Wi-Fi button to **ON**. The product will scan available wireless networks automatically. Select a network under Wi-Fi networks and input the password to connect.



Ethernet

 "Ethernet" at the left side.



6 3:23 Q Settings Wireless & networks Wi-Fi * Bluetooth Ethernet 0 Data usage More Device Ð Display Sound & notification Storage & USB Apps **i** Memory • Users ល Display Output Screenshot Setting Personal Location Ô Security Ĵ \bigtriangledown 0 Ĵ

Check "Use Ethernet" and plug the Internet cable into the Ethernet port (#13 in Product Instruction). If Wi-Fi is on, please turn off Wi-Fi to allow Ethernet working.


ē						↔ 🖹 3:04
÷	Ethernet					
	Ethernet Ethernet is enabled					•
	Ethernet Ip mode					
	IP address 192.255.1.255					
	netmask 192.255.255.0					
	gateway 192.255.1.255					
	dns1 192.255.1.255					
	dns2 0.0.0.0					
	Proxy					
		Ð	\bigtriangledown	0		

If you are Static IP user, please set the configurations manually.



Bluetooth


In the App list, click "Settings" open the system setting app, and select the option "Bluetooth".

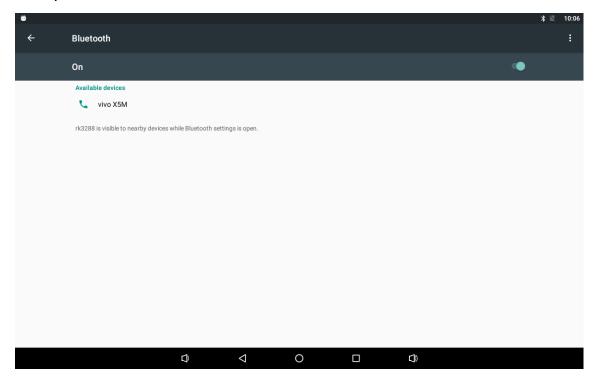


Switch the Bluetooth button to **ON**. The product will scan ambient available Bluetooth devices automatically.



If you want to pair another Bluetooth device, select it from the "Available Devices" list, and then click "Pair" in the pop-up window. At the same time, click "Pair" in the pop-up window of the Bluetooth device to be paired.

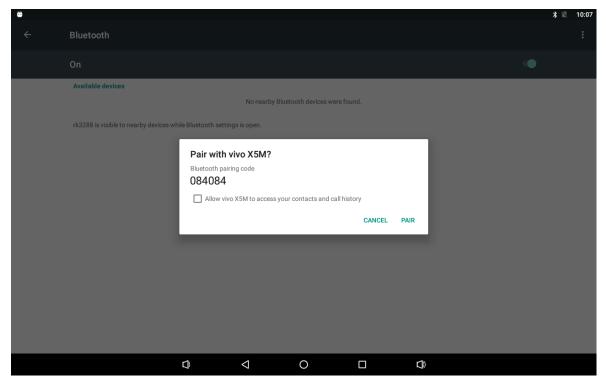

After pairing, the paired device will be moved to the "Paired Devices" list.

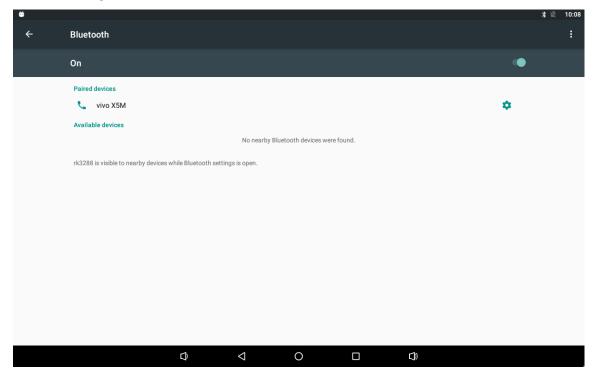



Click the three point icon in the upper right corner to pop up the setting interface, and select refresh, rename this device and show received files.

ŏ				* 🔍 10:09
÷	Bluetooth			Refresh
	On			Rename this device
	Paired devices			Show received files
	📞 vivo X5M			•
	Available devices			
		No nearby Bluetooth devices were fou	nd.	
	rk3288 is visible to nearby devices while Bluetooth settings is	open.		
	⊅ <	1 0		


Virtual Keyboard

a a

The device provides a virtual keyboard for typing. You can use it as a real one.

When you click in a text input box, the virtual keyboard will appear at the bottom of the screen.

To collapse the virtual keyboard, you can click the icon \checkmark in the system bar.

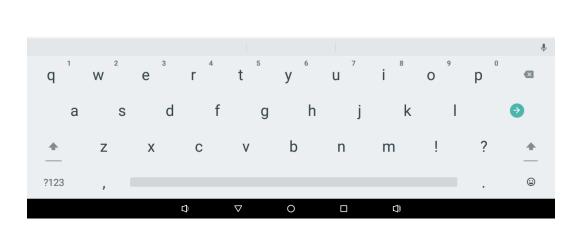




Switch Input Methods

If the keyboard icon is invisible, please check whether the installed input method is selected in the "**Language & input**" option under the system setting app.

ö				2:18
Setting	s			۹
	Аррз		Storage & OSD	
	Memory	±	Users	
ល	Display Output	•	Screenshot Setting	
Pers	onal			
•	Location	ê	Security	
8	Accounts		Language & input	
4	Backup & reset			
Syste	m			
Q	Date & time	Φ	Scheduled	
Ø	Physical Button Manager	ŧ	Accessibility	
e	Printing	i	About tablet	
	\Box \triangleleft ($\mathbf{)}$		

Select the current keyboard option to bring up the change keyboard dialog box.

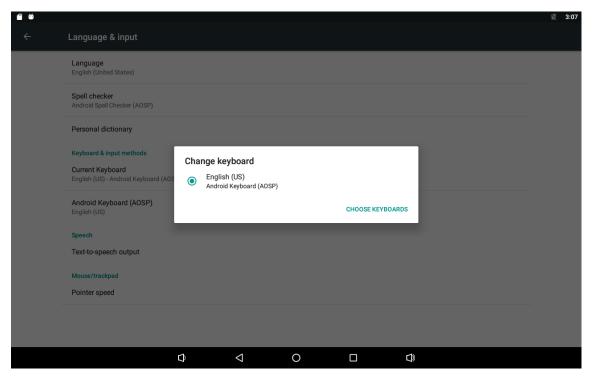




Surf Online

In the App list, open "**Browser**"



When connecting the device to a network, you can visit websites, play online media or download files via the browser.

In a browser window, enter in a URL in the address bar and click "Go" in the virtual keyboard to go. You can also click the add new tabs to make multiple tabs opened simultaneously.

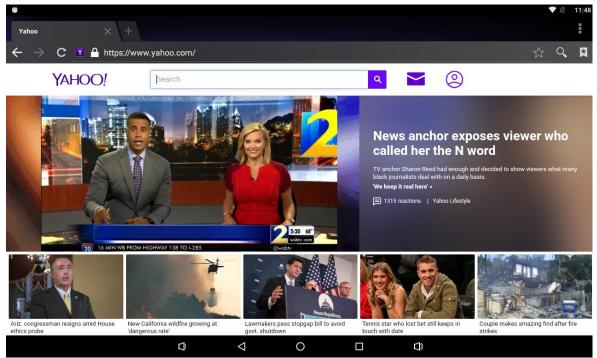



Browse Files

₩ 4 xplorer	st, open " Ex		to view lo		•	
🔒 Home	属 LevelUp	🖭 Multi	C Editor	H NewFolder	Back	
Internal Me	mory					
🖺 SD Card						
ISB USB						

Take the usb drive as an example.

A		E			
🛖 Home	🛃 LevelUp	🖃 Multi	🗹 Editor	RewFolder	Reack
.LOST.DIR					1980-01-01 00:00:0(
2k					
					2018-09-19 14:36:50
4k					2018-08-08 11:17:2{
Airwatch					2018-09-21 19:29:5
Android					
Android					2018-02-05 14:23:44
арр					2000-01-01 01:07:44
Audio					
Addio					2018-07-13 16:51:02
Factory					2018-04-08 10:08:34



Long-press a file or folder to do file operations, such as copy, delete, move (cut), paste, rename, send (share) and create shortcut.

🖷 🕂 🛎								3:09
	Home	LevelUp	🖭 Multi	🗹 Edit	or	H NewFolder	Reack	
C	.LOST.DIR							
C	2k			Сору				
				Delete				
	4k			Move				
	Airwatch			Paste				
				Rename				
Ľ	Android			Send				
				Create shotcut				
	арр		l	shotcut				
	Audio							
	Factory							
	GooglePlay							
		¢	\bigtriangledown	0		D		

If you want to select several files/folders at once, click "Multi" in the menu, and then select files/folders. The selected files/folders will be highlighted in orange.

	🛃 LevelUp	😑 Multi	🗹 Editor	RewFolder	Reack
4k				2018-08	8-08 11:17:28 drw
Airwatch				2018-09	9-21 19:29:56 drw
Android				12018-01	2-05 14:23:44 drw
арр					
Audio				2000-07	1-01 01:07:44 drw
				2018-07	7-13 16:51:02 drw
Factory				2018-04	4-08 10:08:34 drw
GooglePlay				2018-04	4-08 10:09:18 drw

Click "Editor" in the menu to operate the selected files/folders.



	Φ Ψ						🛡 🖹 3:59
ι							
	🛖 Home	🛃 LevelUp	🖭 Multi	🗹 Editor	+ NewF	older 🛛 🛃 Back	1
	4k						_
	Airwatch			Сору			_
	Android			Delete Move			_
	арр			Paste			_
	Audio			Rename Send			_
	Factory			Create shotcut			_
	GooglePlay						-
	HTML5						_
	ImpacTV						
		D)	\triangleleft	0 [) ()		

Play Media

With the provided apps, you can play your media files on your storage, such as pictures, music and videos.



Picture Player:

Support JPG, BMP, GIF.



Music Player:

Support MP2, WMA, WAV, AAC, OGG, ASF.



Video Player:

Support MKV, TS, FLV, AVI, VOB, MPG, DAT, ASF, RM, MOV, 3GP, MP4, WMV.



Install & Uninstall Apps Install Apps


Before installing an app, please download the app (.apk) to via the browser, or copy a downloaded app to the device from your computer.

Then you can open "**ApkInstaller**" 😌 in the App list to install the downloaded app.


First installation prompt "you need grant access READ_EXTERNAL_STORAGE" select ok.

نة					× 2	1:37
Apkinstaller						
		Ir	nstall			
		M	anage			
	You need to gr WRITE_EXTER		EAD_EXTERNAL	_STORAGE,		
		ок		Cancel		
				_		
	Q	\triangleleft	0		J)	

Choose "Allow".

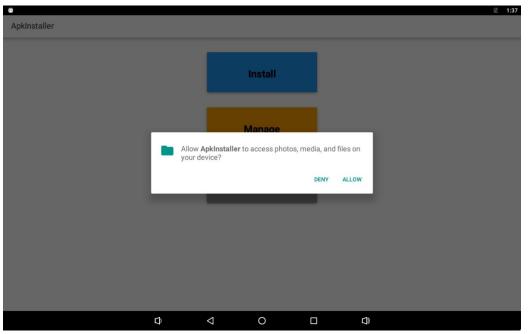



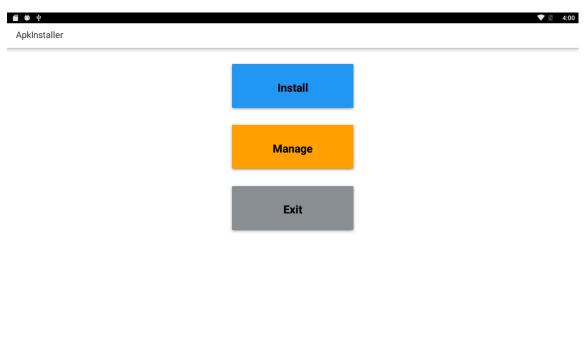

Enter the installation interface and click Install.

The apk files will be automatically scanned in the right side list.

m め 中 Install					V 🔊 4:01
Path: USB Memory/storage/82					
/				Directory	: USB Memory/storage/82
.					perr_v2.06.apk
🔲 4k					WatchDogTest_v1.2.apk
SDh				-	scanner.apk
SDx					GPSTestPlus_v1.2.1.apk
GooglePlay					Touch Test v1.4.apk
Factory				•	ProDVX LSP.apk
ProDVX LSP					scanner.apk
Airwatch					G-Player_v0.1.6_for6.0.apk
videonpix				•	StabilityTest_2.2.apk
🔲 SD-a					ProDVX LSP.apk
ImpacTV					UnInstallMlock_v0.2.apk
	Û	\bigtriangledown	0		

Click the apk you want to install.



Click "Install" or "Next" until it turns to "Install", and then waiting for installation finished.

e म 📾 Install		№ 3:13
Path: USB Memory/storage/82E4-0835	🥞 R.E.	
Z /	Do you want to install an update to this existing application? Your existing data will not be lost. The updated application will get	y/storage/82E4-0835
· · · ·	access to: NEW ALL	ayer_v0.9.9_r7_6.0.apk
🔚 4k		neck_44100.apk
SD SD		/Test_RK15N.apk
SD SD		deoLooper_v2.1.0_prodvx.apk
GooglePlay		nc_v1.0.9a.apk
Factory	This update requires no new permissions.	gRoomBooking_v1.5.1.apk
GooglePlay		cplorer_3.1.9_Chinese.apk
Airwatch		.apk
videonpix		aderByWeb_v0.2.apk
Airwatch	CANCEL INSTALL	al.apk
ImpacTV	Alam Nam	Videe NDiv v2 2 4 1 enk
])

You can also download an android app market, and install the apps via the market.

If "Install blocked" is prompted when installing an app, please open "**Settings**" and select the option "**Security**", allow "**Unknown sources**" and then back to reinstall the app.

Ö							2:10
÷	Security						
	Device security Screen lock None						
	Lock screen message None						
	Encryption Encrypt tablet						
	Passwords Make passwords visible					•	
	Device administration Device administrators View or deactivate device administr	rators					
	Unknown sources Allow installation of apps from unk	nown sources				•	
	Credential storage Storage type Hardware-backed						
		Û	\bigtriangledown	0	J)		



Uninstall Apps

To uninstall an app, please open "**Settings**" in the App list and select the option "**Apps**". In this option, you will see the installed apps list.

🖀 🕂 🖮							🖹 3:14
	Settings						۹
	••• More						
	Device						
	Display			٠	Sound & notification		
	🍯 Apps				Storage & USB		
	Memory			÷	Users		
	Display Out	put		•	Screenshot Setting		
	Personal						
	Continue Location			â	Security		
	Accounts			•	Language & input		
	🚹 Backup & re:	set					
		Ĵ	\bigtriangledown	0			

Click the app you want to remove to enter the detail page.

∰ \ ₩ \ ∞							3:14
÷	App info						
		R.E. version 3.1	1.9				
			UNINSTALL			FORCE STOP	
	Storage 9.87 MB used in In	ternal storage					
	Data usage No data used						
	Permissions Contacts and Store	age					
	Notifications Normal						
	Open by default No defaults set						
	Battery No battery use sind						
	Mononi					 	
			$\hat{\Box}$	\bigtriangledown	0		



Click the "Uninstall" button and select "OK", and then waiting for uninstallation finished.

🛱 Ý 🖻								2	3:15
	App info								
		R.E. version 3.	1.9						
			UNINSTALL			FORC	ESTOP		
	Storage 9.87 MB used in Ir	nternal storage	📑 R.E.						
	Data usage No data used		Do you want to	o uninstall this ap	p?				
	Permissions Contacts and Sto	rage		-	-	CANCEL	ок		
	Notifications Normal								
	Open by default No defaults set	t							
	Momon		-	1	<u> </u>	<u> </u>	-10		
			Û	\bigtriangledown	0				

Reset to Factory Default Please make sure to back up the important data before resetting the device.

In the App list, click "Settings" open the system setting app, and select the option "Backup & reset".

🖆 4 🛎		🖹 3:15
Setti	ings	۹
	Apps 👝 Storage & OSD	
1	Memory Lusers	
ŋ	🖞 Display Output 💽 Screenshot Setting	
Pe	Personal	
•	Cocation Security	
E	Accounts	
•	Backup & reset	
Sy	System	
C	S Date & time	
Œ	Physical Button Manager Accessibility	
e	Printing (i) About tablet	



Click "Factory data reset".

₫ Ψ ♥						3:15
÷	Backup & reset					
	Network settings reset					
	Factory data reset					
		D	\bigtriangledown	0		

Click "Reset tablet" button.

∰ ∳ ₩						N	3:15
÷	Factory data reset						
This will eras	e all data from your tablet's inte	ernal storage, inc	luding:				
 Your Googl 	e account d app data and settings d apps						
				RESET TABLET			
		Û	\bigtriangledown	0			



Click "Erase everything" button.

🖷 🕂 单							📓 3:15
÷	Reset?						
Erase all y	our personal information ar	nd downloaded a	apps? You can'	t undo this acti	on!		
			ERAS	EEVERYTHING			
			_				
		Þ	\triangleleft	0		D	

When the factory data reset window appears, wait for the system to restart and reset to the factory default.

∰ ¥ ₩						١	3:16
÷	Reset?						
Erase all your personal information and downloaded apps? You can't undo this action!							
				VERYTHING			
		Factory data reset					
		ting					
		D <	⊲	0			



Federal Communications Commission (FCC) Statement

15.21 You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) this device may not cause harmful interference, and

2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rule

