



NorthVision

Be Your Vision!



VisionShare Start-Up Guide

- **What is included in the package**
- 5 things you should know before using VisionShare
- Suggested evaluation and testing method
- Frequently asked questions

VisionShare Beauty Carton



1st Layer



Receiver & Transmitter

2nd Layer



Charging Station
Touch dongle: AC25 and AC45 only



Quick Start Guide

3rd Layer



Accessories

What Is In The Box?



Receiver x 1



Transmitter x 2



Charging Station x 1



Touch Dongle x 1

*AC25 and AC45 only



Changeable power
adaptor x 2



US adaptor x 2
EU adaptor x 2
UK adaptor x 2 (UK only)



HDMI cable x 1



Micro-USB cable x 1



Mini DisplayPort to
HDMI adaptor x 1

 

VisionShare Start-Up Guide

- What is included in the package?
- **5 things you should know before using VisionShare**
- Suggested evaluation and testing method
- Frequently asked questions

Things You Should Know Before Using VisionShare

1. Power Charging

Power charge during 8 hours before first time use

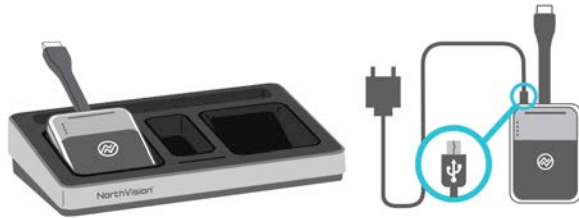


2. Display Resolution

Make sure your display & laptop support 1920x1080 resolution







3. Receiver Location

Place the receiver in an open area for better signal transmission

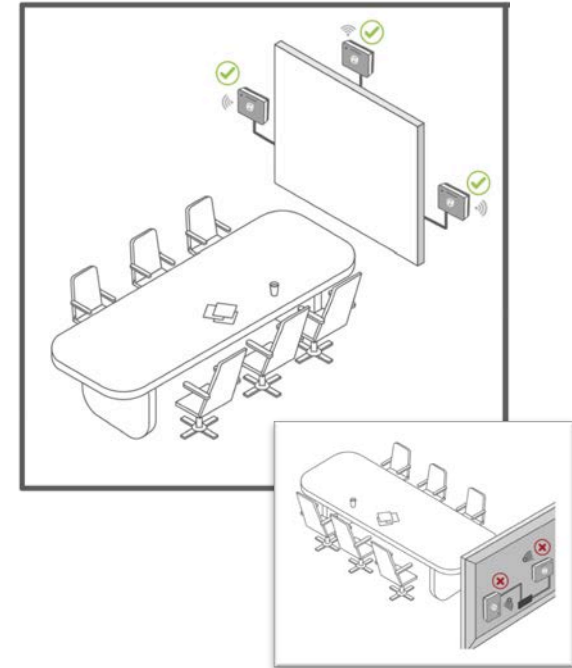

4. How to use?

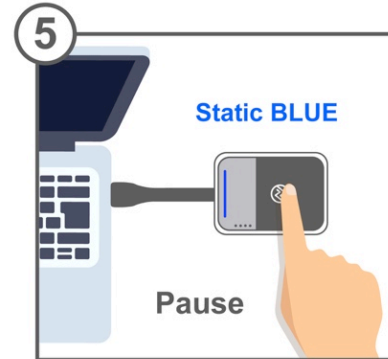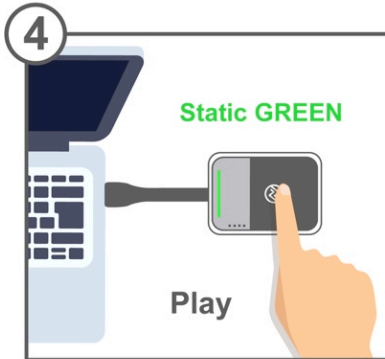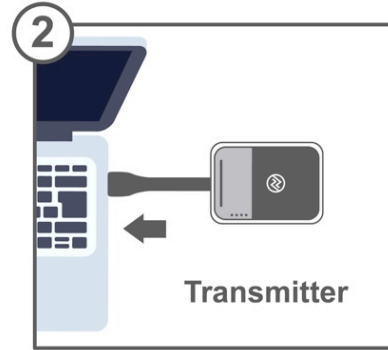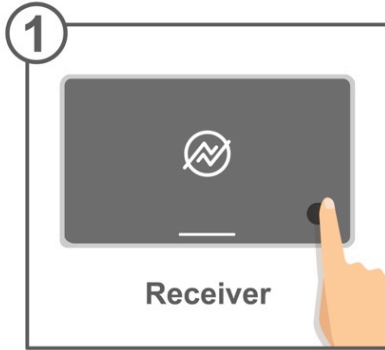


Red: Booting up and searching


Blue: Connected - Ready to play by pressing the NorthVision logo button

Green: Playing - Wireless projection

5. Pairing Process

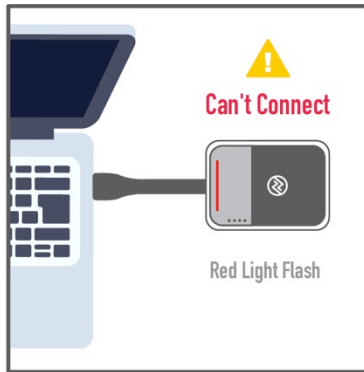

Repairing...

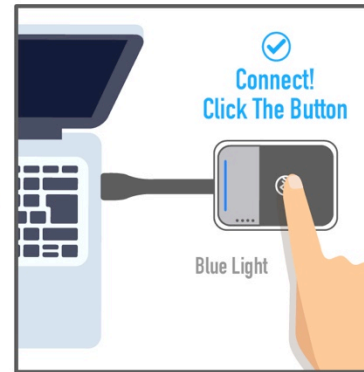


VisionShare Start-Up Guide

- What is included in the package?
- 5 things you should know before using VisionShare
- **Suggested evaluation and testing method**
- Frequently asked questions

VisionShare works with both HDMI and Type-C transmitters without software or driver

True Plug & Play

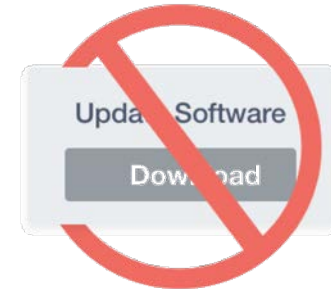



Mouse cursor

High speed mouse cursor - Zero Latency

You are able to control the cursor in real-time while looking at the large display (not your laptop)



High Picture and Video Performance

Picture quality – check the color and contrast compared with wire cable or other types of wireless products

Video quality – near zero latency while playing or streaming videos – No lip-sync issue



Sound and image
synchronization




VisionShare resolution 1080p@60Hz and 4K@30Hz without video compression

True 4K/UHD Performance

VisionShare supports up to 4K/UHD @ 30Hz native resolution without compression or scaling.
(all other wireless presentation products do compress the content and scale up to achieve 4K performance but with lower quality)



Zero Latency Demo

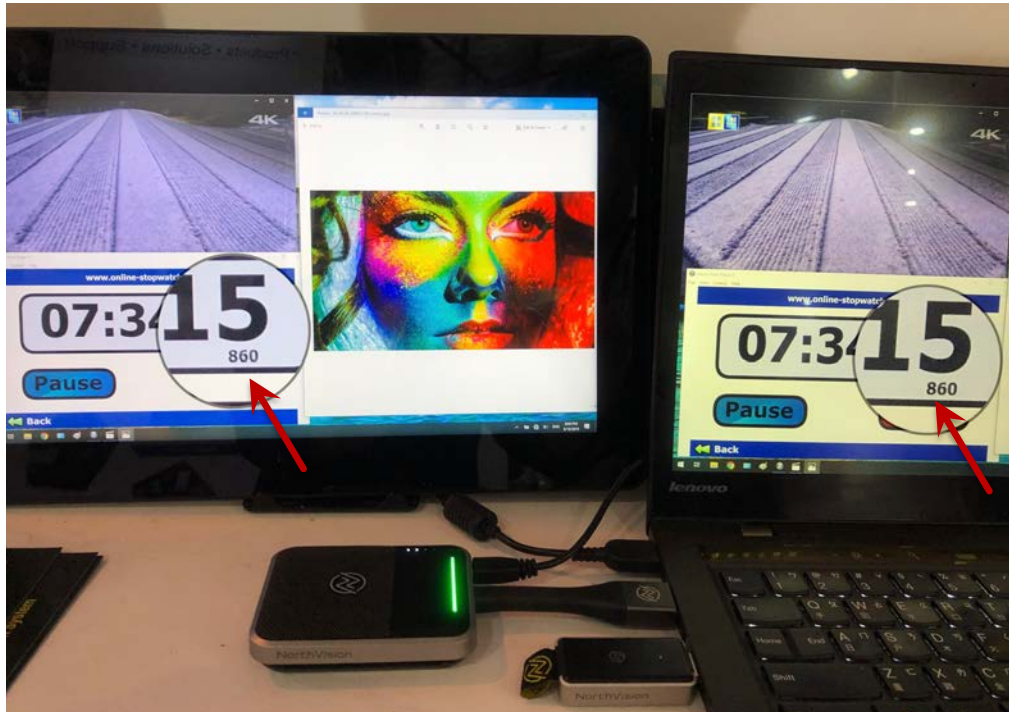

Test completed without any tricks (see methodology below). On the picture you can see that the counter on the display and the counter on the laptop show the same number (millisecond precision) which proves that there is absolutely no latency

Demo setup to prove zero Latency

Use online stopwatch then take a picture of the display and the laptop so you can check that the last 3 digits (millisecond precision) show the same number on both screens

Online stopwatch download link:

<https://www.online-stopwatch.com/>

VisionShare Start-Up Guide

- What is included in the package?
- 5 things you should know before using VisionShare
- Suggested evaluation and testing method
- **Frequently asked questions**

Installation



The best location to place the receiver with an interactive display



Good





Bad




neutral




neutral

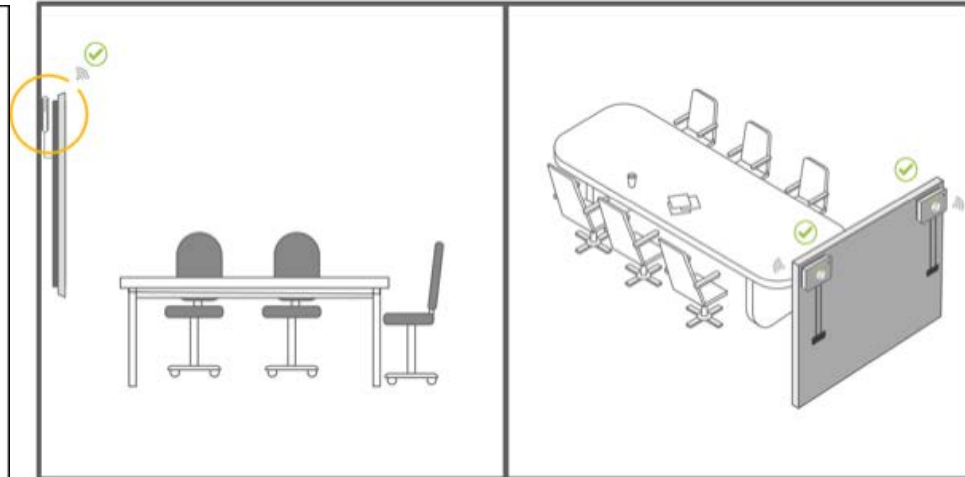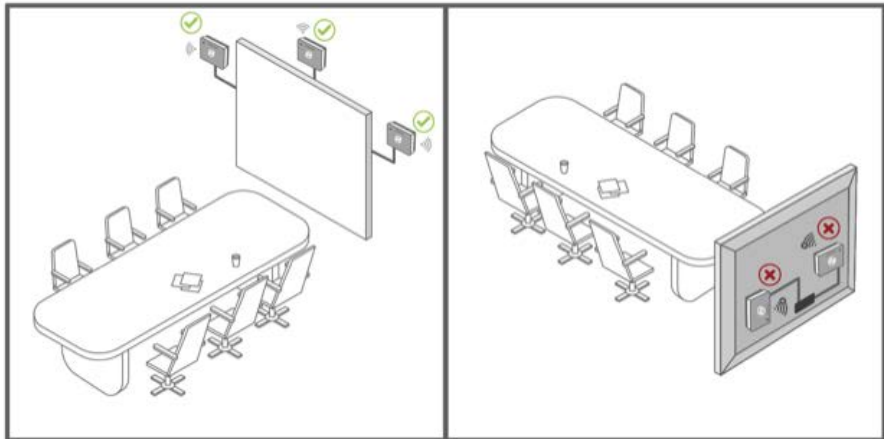

To place the receiver with a projector

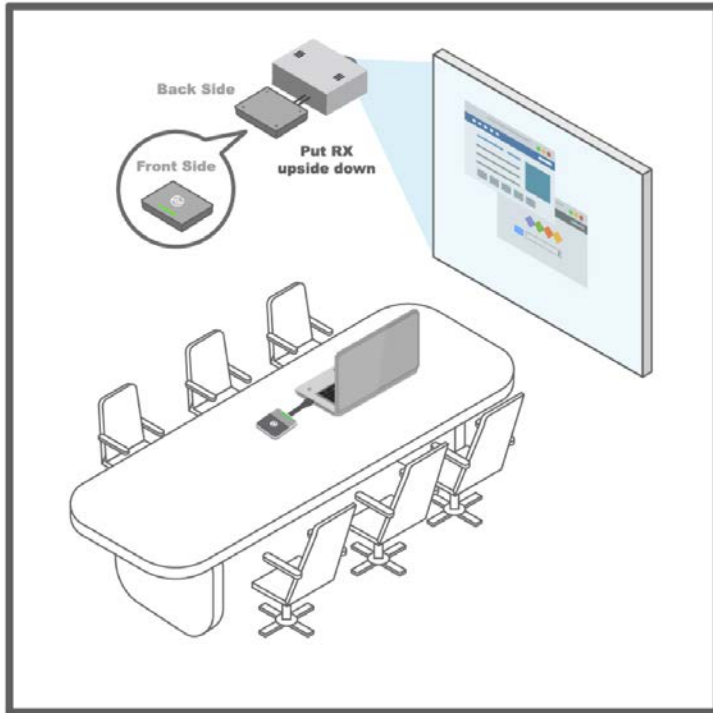

Receiver signal strength at different locations

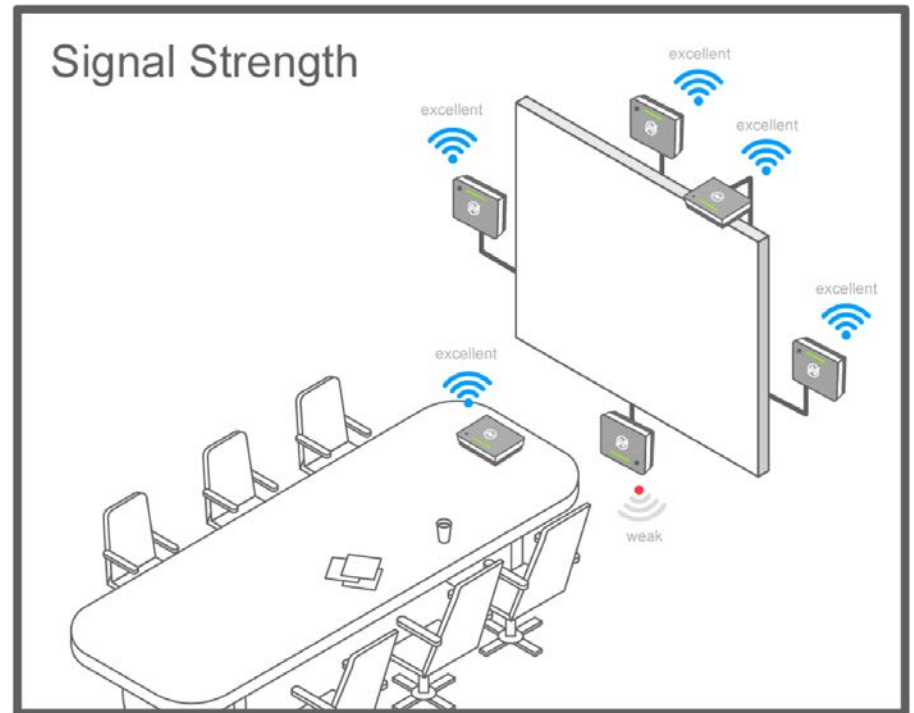

Receiver



No Image shows on the screen



Check if power adaptor is 5V/4A and if power adaptor is well connected



Make sure your display supports 1920*1080 resolution



Select correct input source



Receiver power supply in 5V/4A



Display resolution support above 1920*1080p





How to play the button?




Press the center NorthVision logo to “Play” and “Pause” the image



Can I pair the transmitter with another receiver?



Press the transmitter button for 10 seconds then release, it proceeds pairing process automatically

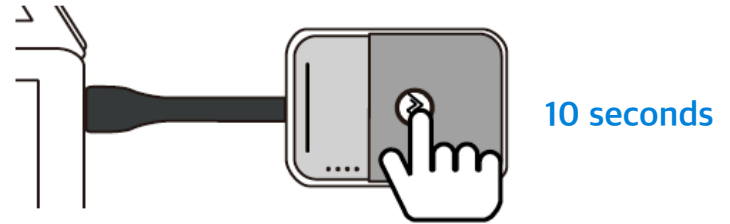



No LED light bar when plug in to HDMI port



Make sure your transmitter devices are fully charged

1. Charging Station



Make sure your transmitter is well positioned in the charging station

Power supply in station: 5V/4A

2. Micro USB



Make sure the micro USB cable is connected to the transmitter


Power supply in micro USB: 5V/1.5A



Fails to Charge



No Power
Deep sleep mode

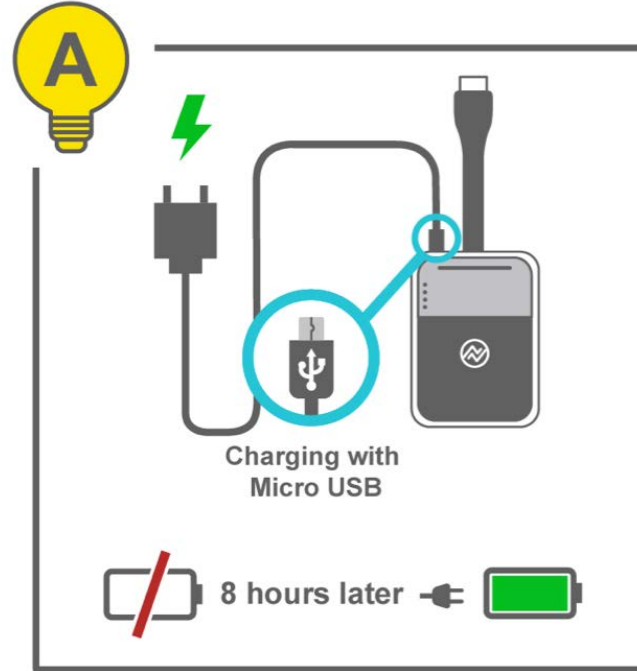


When first time use or if there is a long time with no use, please make sure the transmitter battery has charged over 8 hours before use



Image shows black when press play button?



A1: Display resolution doesn't support input resolution
A2: Adjust input resolution to match or change it to 1920x1080 or 3840x2160

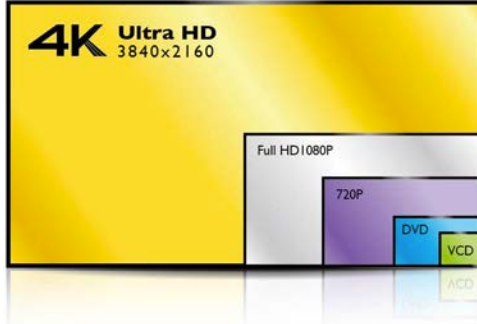


1920x1080
or
3840x2160



No image shows



A1: Didn't press the button properly
A2: Pressed too many times the button

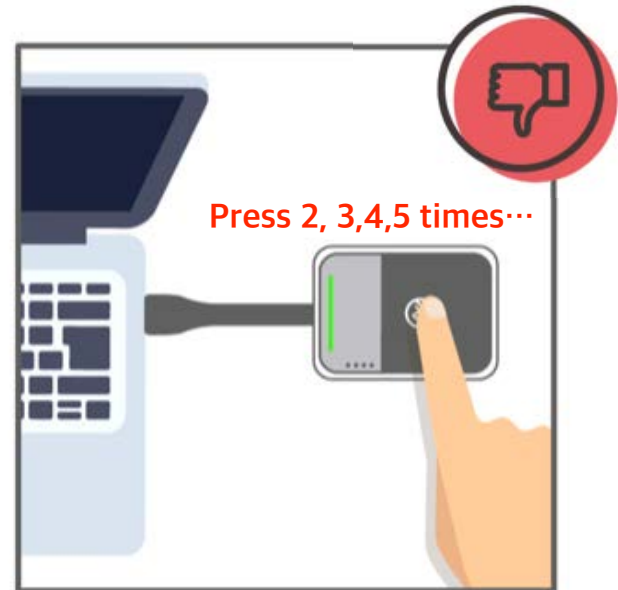



Signal issue: No signal or image is disconnected



The best way to use Visionshare

Weak / No Signal



Good Signal



Menu Setup



Unable to navigate into VisionShare system setting



Set up button



A1: Make sure your input source (keyboard/mouse/touch display) supports HID code

A2: Make sure the USB cable is connected between the display and the receiver



TypeB
(Display)

TypeA
(Receiver)






How to use “Mirroring360” with personal devices?

Step1:

Connect the ethernet cable to your receiver and make sure the IP address is displayed on the screen

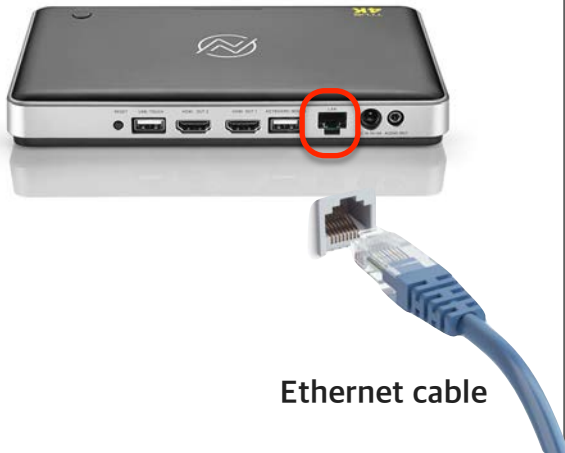

Step2:

Android/Windows/Chrome system:

Download and install “Mirroring360” on your Android devices before use.



Download link:

www.NorthVision.com/download

iOS/MAC system:

Use “Airplay” function to mirror the image wirelessly



Step3:

Open Mirroring360 from main menu, find correct IP address and connect.

Make sure your BYOD is connected to the same network



Mirroring360 button



The Best Solution For You.



NorthVision