

User's Guide

4K DisplayPort Fiber Optic Cable DPM2



Thank you for purchasing DPM2.

DPM2, 4K DisplayPort fiber optic cable, is designed to let 4K@60Hz UHD DisplayPort signal extend over 40 meters away from host based on DP1.2 standard by optical transmission technology.

www.ophit.com



Check your package

Check the package and make sure you have everything:

Contents

- (1) DPM2 cable- 4K DisplayPort fiber optic cable
- (2) User's Guide

If any of these items are missing in your package, contact OPHIT or your supplier for support.

NOTE: Package content may differ if you have placed a special order or placed order from anywhere other than OPHIT CO., LTD. OPHIT CO., LTD. reserves the right to make changes without further notice to a product described herein to improve reliability, design, packaging or function.

nstallation

Installation Steps:

- 1. Connect the DPM2 transmitter(TX) to DisplayPort source device.
- 2. Connect the DPM2 Receiver(RX) to Display device.
- Blue LED indicator on the TX and RX modules will be light up after all connections are completed.
- $\ensuremath{\text{\#}}\xspace$ Be careful not to connect TX and RX cable to the opposite direction.
- *Use DP to Mini DP or HDMI/DVI adapter to connect DPM2 is not guaranteed.





Trouble shooting


DPM2 cable may not be compatible with some of graphic cards. Please follow the troubleshooting steps below.

Please check that blue LED light of both TX and RX module are on.

- If both LED lights or one side of LED light was off,
- 1) Please re-connect TX and RX connector of DPM2.
- If there is no display when both TX and RX side of LED light are on,
- 1) Please reconnect TX connector of DPM2.
- 2) Please reboot monitor.

Please contact manufacturer if problem are still not fixed after troubleshooting.

Application

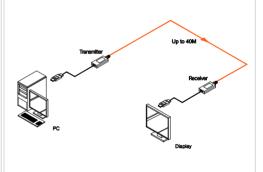



Warranty

We, OPHIT hereby warrant the final purchase of our product as follows.

In the case of troubles on our products, please contact the shop purchased.

One year limited warranty

Our customers have right to be served with free of charge when there is trouble in this product during 1(one) year from the day purchased.

Out of warranty services

When you request services (in the case of non manufacturing defects but the troubles by misusage), may served with charge as follows.

- Defects of products caused by accident, disaster.
- Damages of products caused by the customer's carelessness or mistaken application.
- Damages of products caused by the application of the parts or products not supplied or sold by our company.
- Damages of products and related defects caused by not our staff or the men or group not nominated by us for services.

The interchanged parts and products for maintenance services shall be replaced as new parts and products operating normally, and the inter-changed parts and products shall be subjected to our company.



RMA Request Form

RMA No.:

Customer Name:		Return Date:	
Company Name:		Phone:	
Model Name:		E-Mail:	
Serial No:		Place of Purchase:	
Address: (For RMA Return)			
RMA details: (Please describe RMA status, application used and failure symptom)			



Technical and Sales Support

KORFA HO

OPHIT CO., LTD.

3F Suntechnovil 77, Deogyeong-daero 1471beon-gil, Yeongtong-Gu, Suwon-City, Kyunggi-Do, Korea (443-400)

> Tel: + 82 (0)31 695 5543 Fax: + 82 (0)31 695 5545

F-Mail jhchoi35@ophit.com

Regional Office

USA

Foreseeson Custom Display

2210F. Winston Road Anaheim. CA 92806 USA Tel: +1-714 300 0540 Fax: +1-714 300 0546

E-mail: jhan@foreseesonusa.com

ПК

Foreseeson LIK Ltd

Unit 2Kingsmill Business Park, Chapel Mill Rd. Kingston Upon Thames, Surrey: KT1 3GZ: UK Tel: +44 (0)208 546 1047 Fax: +44 (0)208 546 3931 E-mail: leon.bang@fsnmed.eu

Furone

Foreseeson GmhH

Industriestrasse 38a 63150 Heusenstamm, Germany TEL: +49 (0)6104 64398 0 FAX: +49 (0)6104 64398 11 E-mail: christian.elfert@fsnmed.eu

www.ophit.com





